


# ProCAB QC V1.4.0 Release Notes

- Pack lists can now be written as a .PDF and sent as an Email automatically.
- Operators can now be required to log in.
  - When enabled, an operator must be selected and authenticated with a PIN before ProCAB QC can be operated.

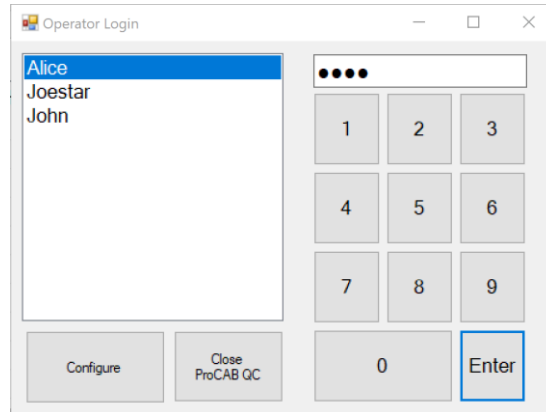

- After an extended period of inactivity, any logged-in operator can be logged out automatically.
- Operators are then identified on measured parts in CSV output.

asured	(Out Of Squ	Out Of Squ	Operator
0	0	TRUE	Alice
0	0	TRUE	Alice
asured	(Out Of Squ	Out Of Squ	Operator
0	0	TRUE	Alice
0	0	TRUE	John
asured	(Out Of Squ	Out Of Squ	Operator
0	0	TRUE	John
0	0	TRUE	John

- Depth and Angle Axes can now both be enabled at the same time.
- Loading of settings and parameters is now more robust.
- Settings import/export utilities fixed.